



1

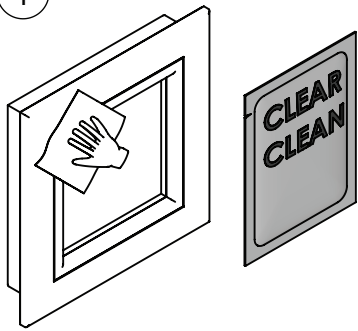


Thoroughly clean all four corners of the window frame with the provided cloth and then allow to evaporate for about 5 minutes.

Neem het reinigingsdoek uit de verpakking en maak de hoeken waar de steunen komen grondig schoon. Laat alles 5 minuten drogen voordat je de steunen gaat bevestigen.

2

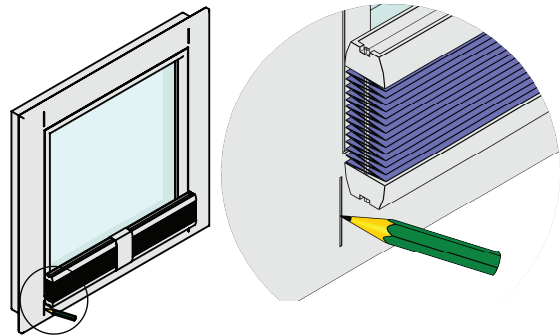


3

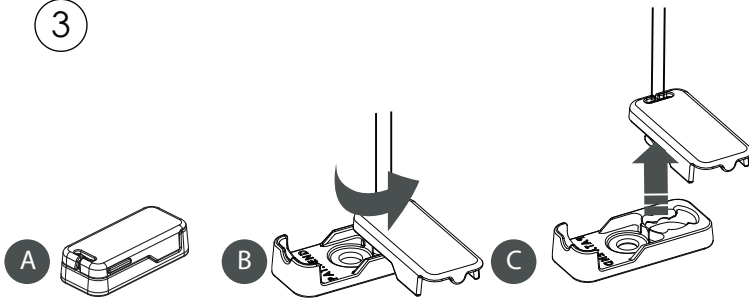

Attach the tensioning shoe, as shown in Figure 3, to the bracket. Assemble two versions for the left side and two for the right side. For the two right-side pieces, the oval opening should face right. For the two left-side pieces, it should face left.

The oval opening must always be positioned on the outside when assembled.


4

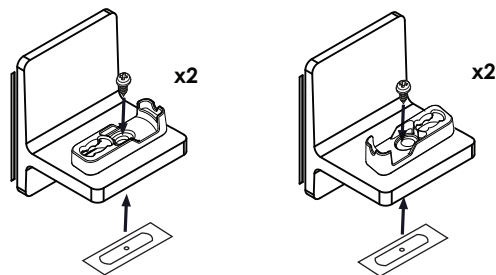

Bevestig het koordschoentje van afbeelding 3 aan de steunen. Maak hierbij 2 versies voor de linkerzijde en 2 voor de rechterzijde.

Let op: de ovale opening van het schoentje moet bij 2 stuks naar rechts wijzen en bij 2 stuks naar links. De ovale opening komt bij montage altijd aan de buitenzijde.

5

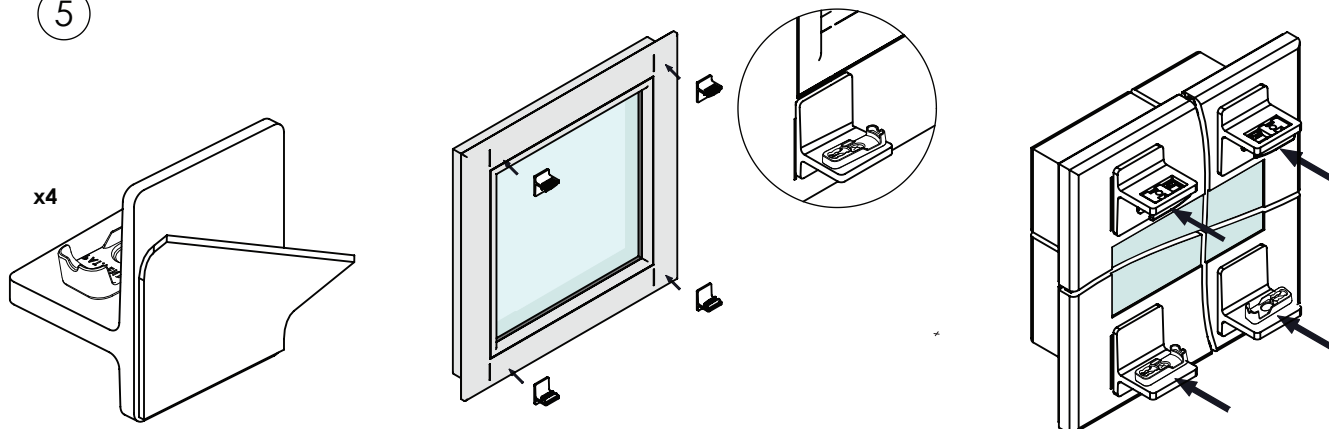

Stick each bracket on the window frame where the glass meets the frame, as shown on the drawing and press firmly for 10 seconds.

Situeer de steunen zoals op de foto hierboven. Zorg ervoor dat de steunen altijd met het lange gedeelte naar het glas toe wijzen. Plak de steunen op dezelfde lijn als op de foto, direct onder de glaslijst en in het verlengde van de glaslijst links en rechts. Druk de beugels 10 sec stevig aan.

6

